


Atlantic Supply

Probe Rod Assembly Instructions

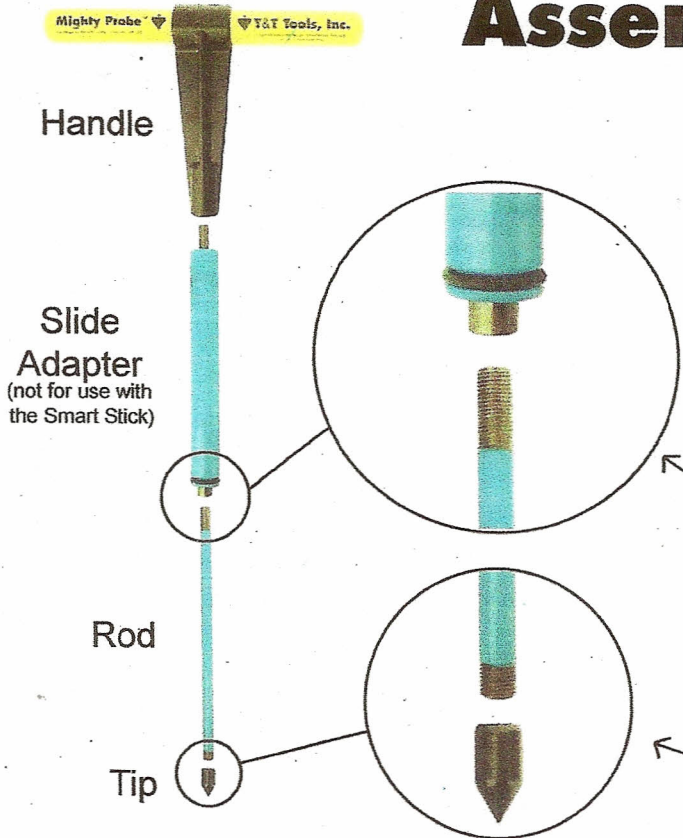

It is **IMPORTANT** that your probe rod is assembled properly.

- The rod end with **more threads** (7/8") needs to be connected to the **handle** or the slide adapter.
- The rod end with **fewer threads** (3/8") needs to be connected to the **tip**.

If the product is assembled incorrectly, it will fail.

← The Handle or Slide Adapter screws onto the end of the rod with more threads.

← The tip screws onto the end of the rod with fewer threads.

LARGO

RIVIERA BEACH

ORLANDO

JACKSONVILLE

ALABAMA

800-752-9416

800-535-7384

800-569-8950

888-260-5584

866-917-3447